


# Proper Assembly of the Center-Hub (Avoiding the 'Nr. 1' MOST Common Mistake)


## Proper Installation:

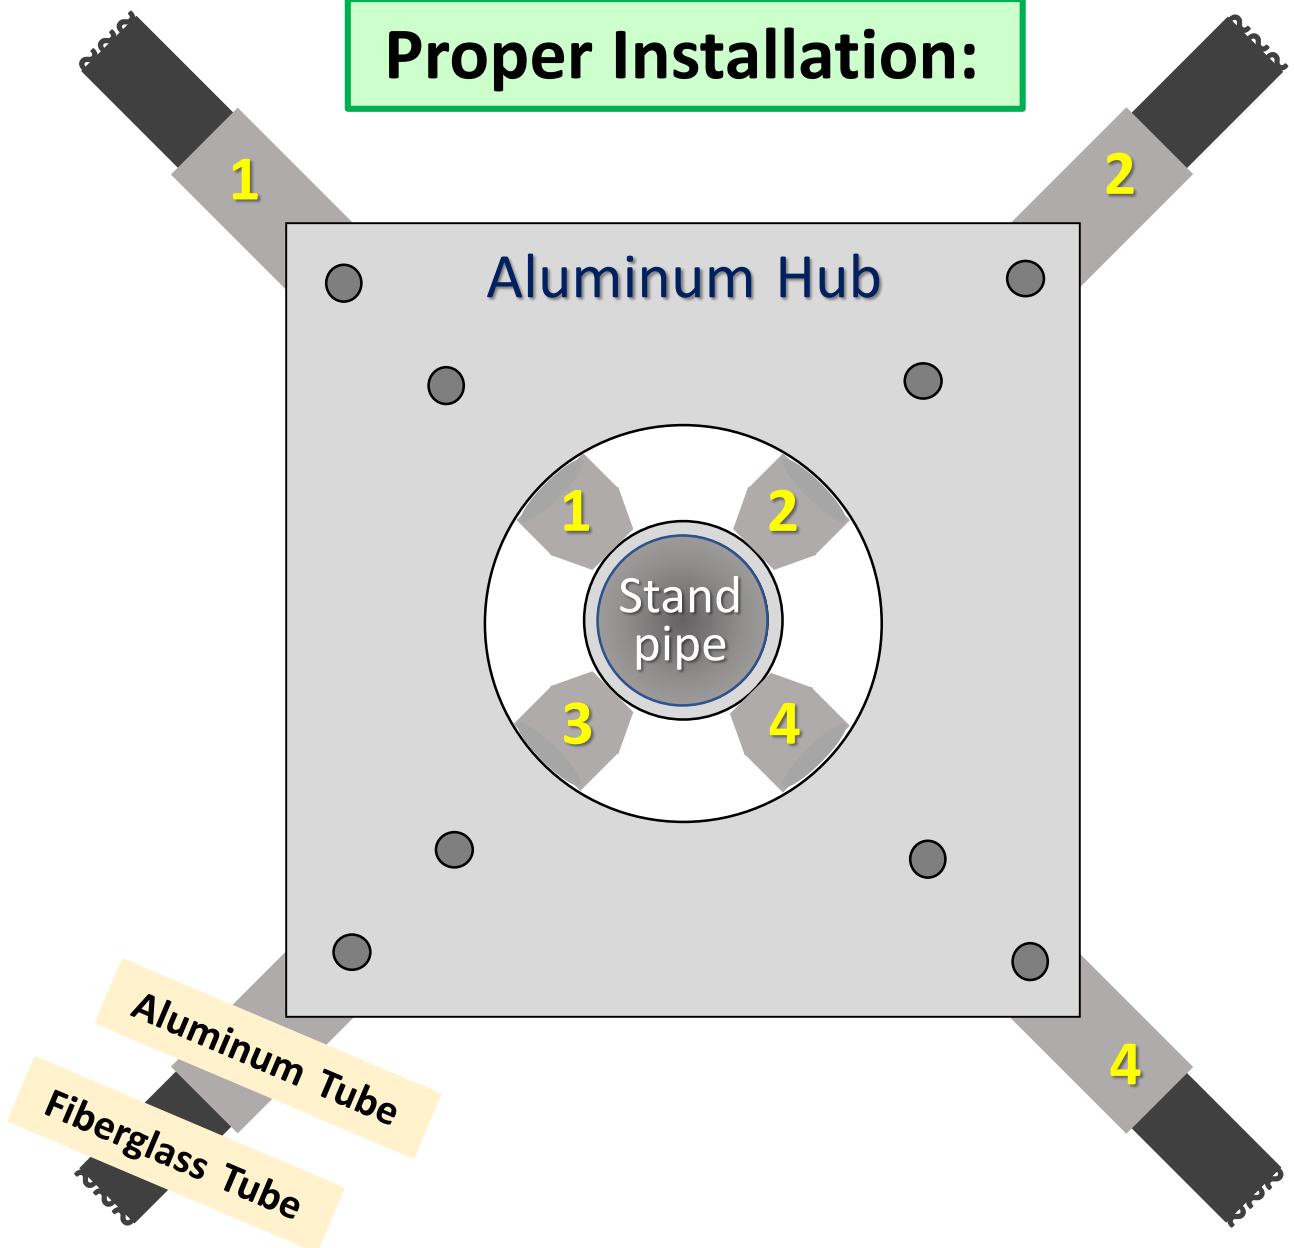

Look closely at the standpipe (mast) in the center.  
Notice that all 4 aluminium tubes are physically touching the standpipe. **This is a MUST!**

# (Avoid the Nr. 1 Most Common Mistake)

## BAD Installation:

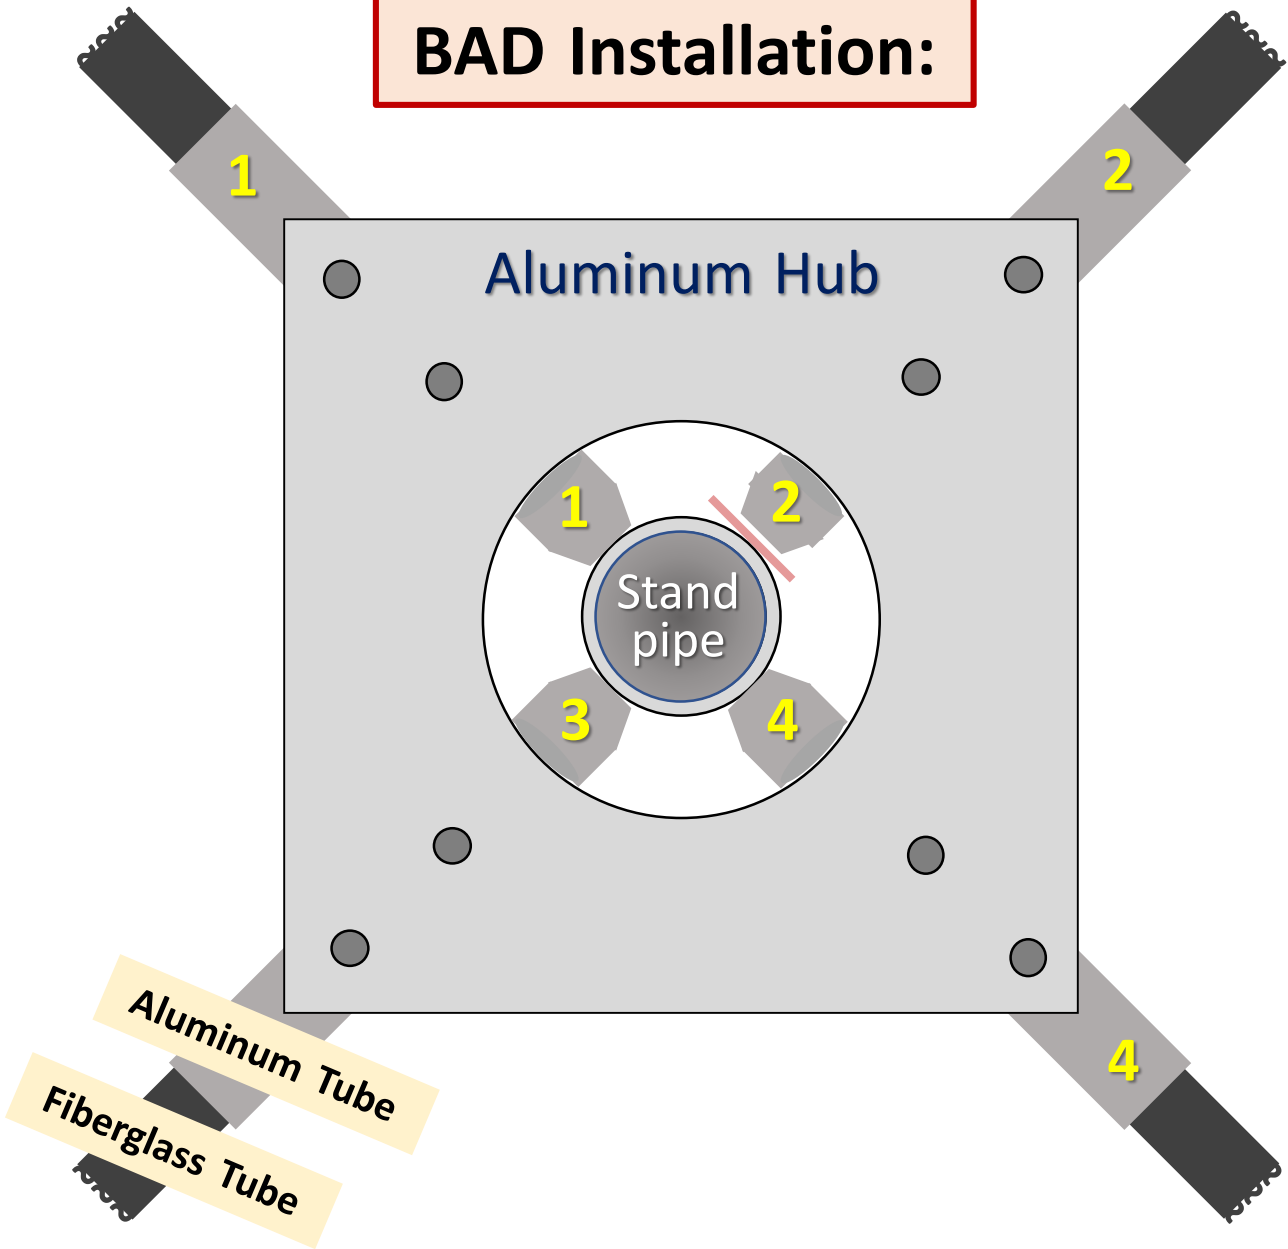

Look closely at the standpipe (mast) in the center.  
Notice that aluminium tube **nr. 2** is **NOT** physically touching the standpipe. This is a **VERY BAD!**  
This will cause the aluminium plates to soon bend.  
You **MUST** fix it BEFORE erecting the Spiderbeam!