


Mounting Wire Elements to the 5-Band HD Spiderbeam

Preparing the Stainless Steel Hose Clamps with Rubber Padding (chapter 2.2.3 NEW):

parts necessary :

Nr.	quantity	description
21	1.6m	Flat rubber strip (EPDM UV resistant), width = 20mm, thickness = 5mm
22	13	V2A (stainless steel) hose clamps, diameter 25-40mm, width = 9mm

Cut the rubber strip in 9 pieces of 12cm length and stick it into the hose clamps:

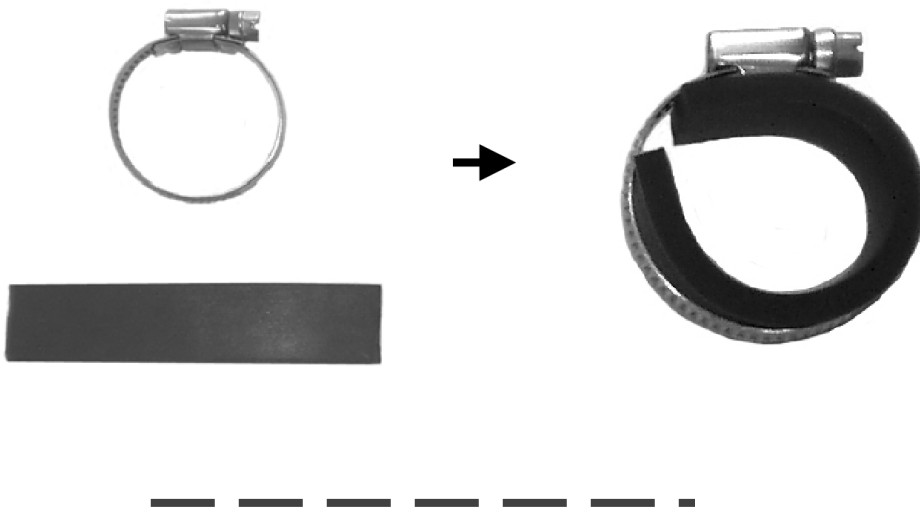

Mounting the Reflector & Director Elements (compare chapter 3.2.):

The wire elements are mounted exactly as described in chapter 3.2. for the portable version.

Instead of the Velcro tape, use the hose clamps with the rubber padding and affix the wire element to the fiberglass boom as shown in the photo:

